



INSTALLATION GUIDE

IRP064

TO SUIT TOYOTA PRADO 150 Series 11/2009+
All models



- Ironman 4x4 Recovery Points fit to the chassis
- It will take about 45 mins to install, or 10 mins if installed with fitment of bull bar
- Below is a list of required tools for installing your Ironman 4x4 Recovery Points:
 - **13, 17, and 19mm socket**
 - **19mm spanner**
 - **Torque wrench**

DATE OF ISSUE: 011118

IMPORTANT: Must be used in conjunction with an Ironman 4x4 Bull Bar

IMPORTANT: Recovery Point installations should only be done by a qualified person and it's the responsibility of this person to ensure correct fitment.

1. Before installation check recovery points application is compatible with your vehicle.

2. Remove under trays.

3. One side at a time, remove the chassis support bracket. Disregard all bolts except for the two that connect the to the bull bar.



4. Loosen the body mount.



5. Insert the crush tube into the cross member. This may require a slight tap in.




- Using the M12 x 60mm bolt, flat washer, spring washer and nut; lift recovery point into position.

NOTE: From this step forward leave all bolts loose.




- Use the M8 bolt, washer and spring washer to hold the top of the recovery point.

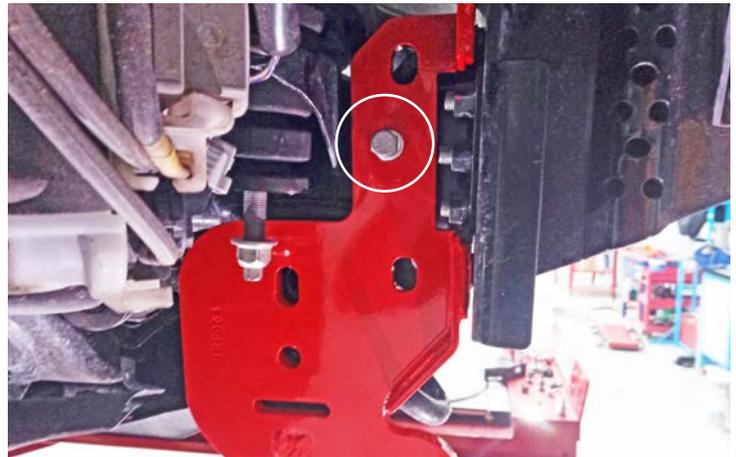

- Use the M12 x 40mm bolt, washer, spring washer and pick up the captive nut through the rear bottom hole.

Insert the M12 x 100mm bolt, flat washers, spring washer and nuts through the rear top hole and the chassis.

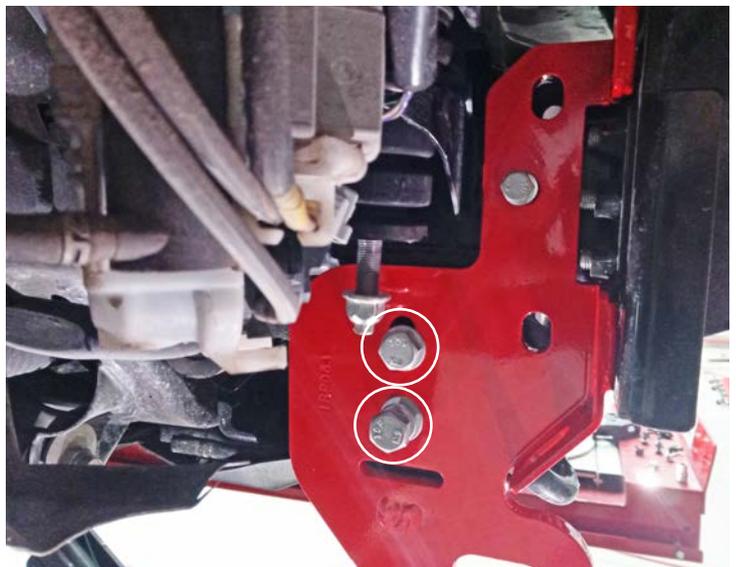

9. Use the remaining 2 x M12 x 100mm bolts, washers, spring washer and nuts to go through chassis.

Re-use the bolts retained from step 3 to connect the recovery point to the bull bar.



10. Tighten all bolts.

Ensuring the body mounts are tensioned to **55Nm**.

11. Re-install under trays.

